Left universal flashing

Length (mm)
Working length
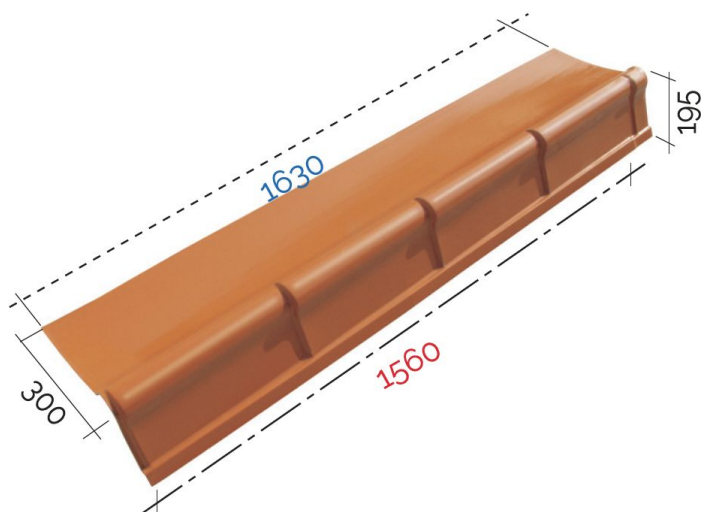
Available colours:

TOP Matt Rustic Red	**TC** Rustic Red	**MS** Dark Brown ref. RAL 8017	**BA** Slate Blue ref. RAL 7016
ANC Antique Red	**RT** Brick ref. RAL 8023	**TN** Natural Brick	**ANF** Antique Florence
ANV Antique Venice	**GOP** Matt Grey ref. RAL 7035	**MOP** Matt Dark Brown ref. RAL 8017	**ANS** Antique Siena

1630
1560
300
195

Item	Colour	Dimensions mm	Matching sheet colours
CSLSXTOP	TOP	1630x300x195	TOP
CSLSXTC	TC	1630x300x195	TC
CSLSXMS	MS	1630x300x195	MS
CSLSXBA	BA	1630x300x195	BA
CSLSXANC	ANC	1630x300x195	ANC
CSLSXRT	RT	1630x300x195	RT
CSLSXTN	TN	1630x300x195	TN
CSLSXANF	ANF	1630x300x195	ANF
CSLSXANV	ANV	1630x300x195	ANV
CSLSXGOP	GOP	1630x300x195	GOP
CSLSXMOP	MOP	1630x300x195	MOP
CSLSXANS	ANS	1630x300x195	ANS

Material:	Technopolymer
Use:	The universal lateral flashing allows the closure between the sheets positioned at the lateral end of the slope and the vertical wall.
Installation:	It is fixed to the roof plane with the installation direction going from the gutter line towards the ridge line.

ASSEMBLY:

- Install universal flashings at both ends of the slope before applying the roofing sheets. The flashing is laid along the slope from the gutter line to the ridge line.
- It is possible to trim the part of the flashing (if excess) near the gutter (image 1 - detail A).
- Fix the universal flashing with self-tapping screws using only the Cover Life accessories: depending on the type of load-bearing structure, use CP00N flat caps on the external side (1B) or CO00N caps (1C) if you fix it on the wave.
- Never fix the flashing on the upper flat part (1D).
- After fixing the first flashing, proceed with the application of the subsequent flashings, making an overlap of 70 mm.
- If the roof is made up of two slopes, also carry out the procedure described above on the opposite slope, trimming the flashings at the intersection on the ridge line (2A).
- Once these operations are completed, position the sheets (using the laying direction provided for the model) making sure that they are aligned with the flashing (3); WARNING (4): never drill the waves of the sheet in conjunction with the flashing.
- Continue with the assembly of the sheets (5) and, once you reach the opposite slope line, trim the sheets (if necessary) so that they cover the flashing. Also in this case it is recommended not to fix the sheets in correspondence with the flashing.

1
direction of installation

overlap 70 mm

lateral fixing with CU00N

fixing on the upper wave of the flashing with CO00N cap

2
Ridge line

To correctly identify the right and left flashing of the roof, observe them from the ridge line.

SX

DX

3
see details in figure 4

4
NO   OK

ATTENTION
It is recommended not to fix the sheet on the first lateral wave in correspondence with the universal flashing in order to allow a better water seal.

5